

5 POINT HEADLIGHT

CATALOG NO. 05-10 & 05-11



4668 Mission Blvd.
 Montclair, CA 91763
 909-613-0028
 www.jokermachine.com
 sales@jokermachine.com

These diagrams show the flexibility of 5 separate bulbs. The same concept goes for the dual 5 Point Headlight.

NOTE: We ran a ground wire outside on both chrome and black anodize light, but only the black anodized headlight might need it, (anodize is not a good conductor).

HEADLIGHT INSTALLATION

- NOTE:** Use liquid thread locker on all hardware
1. Attach headlight to triple tree with stock 3/8-16 mounting bolt.
 2. Wire in accordance to drawing.
 3. Adjust headlight pitch angle and secure pivot bolts.

WIRING DIAGRAM

Figure	Description
1	LOW BEAM ONLY, HEADLIGHT ALL THE TIME
2	1 LOW, 5 HIGH
3	2 LOW, 5 HIGH
4	3 LOW, 5 HIGH
5	2 LOW, 3 HIGH
6	3 LOW, 5 HIGH

Headlight Dimensions

